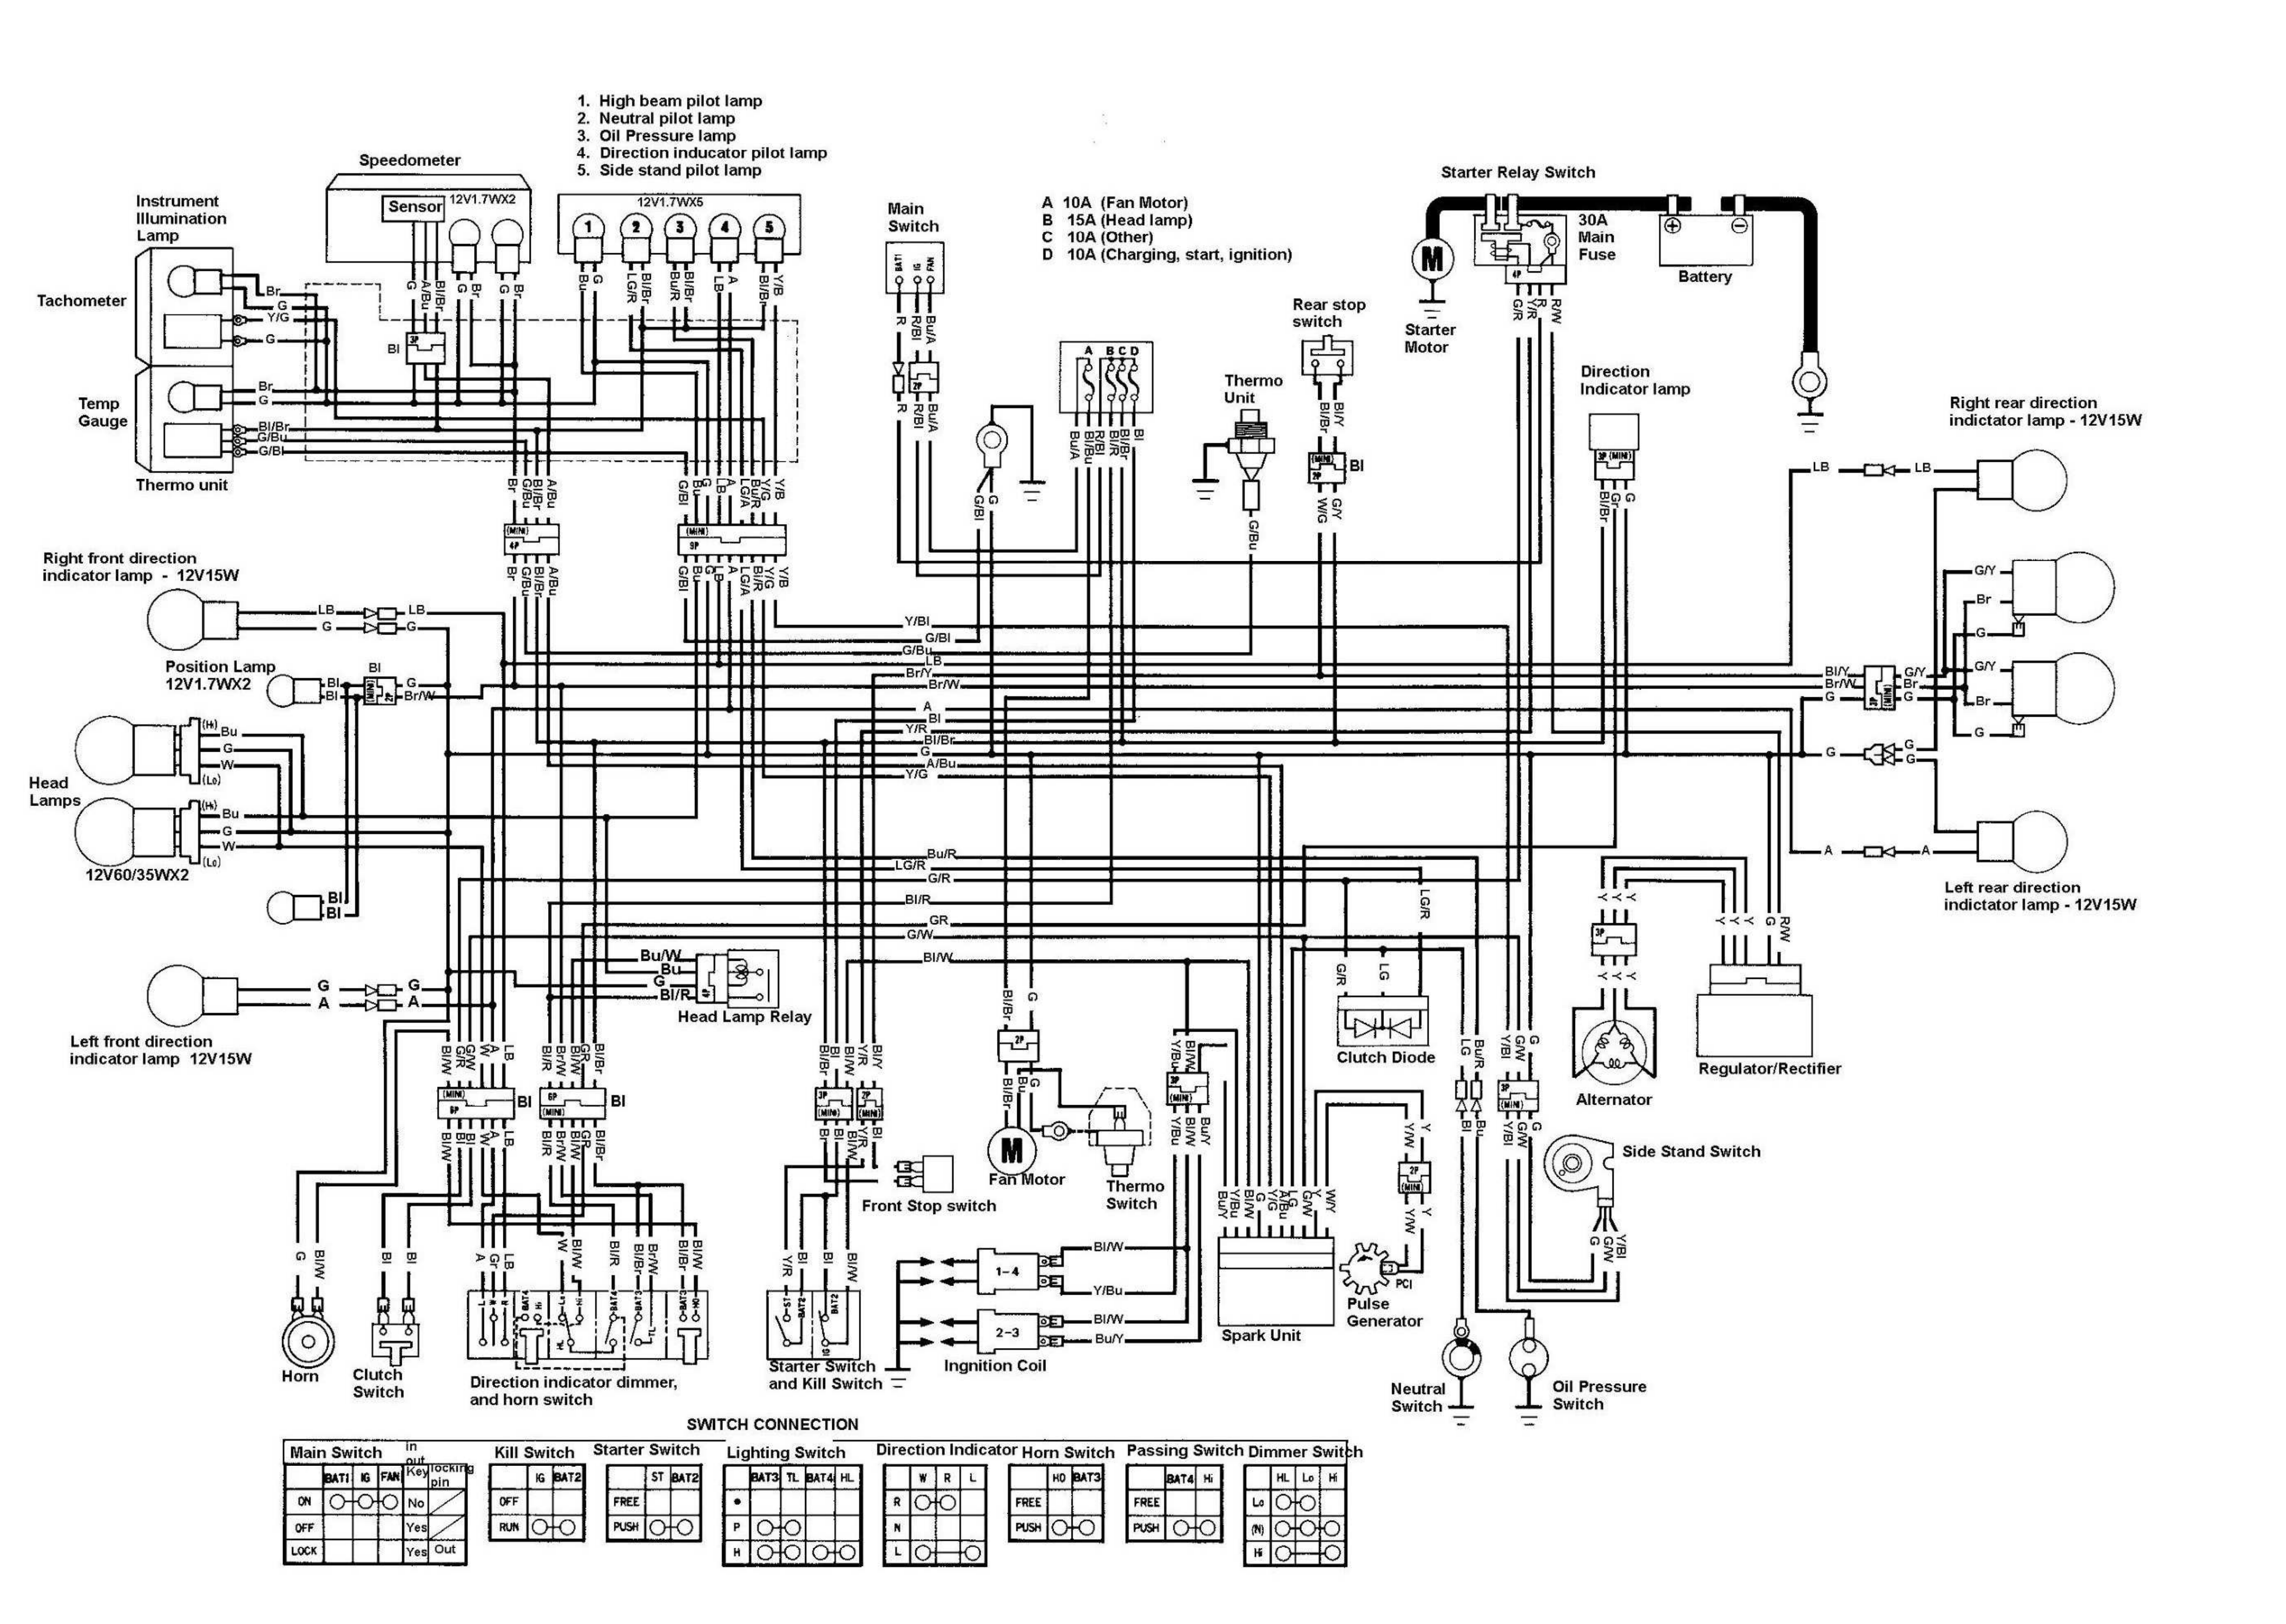


1. High beam pilot lamp
2. Neutral pilot lamp
3. Oil Pressure lamp
4. Direction indicator pilot lamp
5. Side stand pilot lamp
Speedometer
Sensor
12V1.7WX2
12V1.7WX5
Instrument Illumination Lamp
Tachometer
Temp Gauge
Thermo unit
Main Switch
A 10A (Fan Motor)
B 15A (Head lamp)
C 10A (Other)
D 10A (Charging, start, ignition)
Starter Relay Switch
30A Main Fuse
Battery
Starter Motor
Rear stop switch
Thermo Unit
Direction Indicator lamp
Right rear direction indicator lamp - 12V15W
Left rear direction indicator lamp - 12V15W
Right front direction indicator lamp - 12V15W
Position Lamp 12V1.7WX2
Head Lamps
12V60/35WX2
Left front direction indicator lamp 12V15W
Head Lamp Relay
Fan Motor
Thermo Switch
Front Stop switch
Clutch Diode
Regulator/Rectifier
Alternator
Side Stand Switch
Spark Unit
Pulse Generator
Ingnition Coil
Starter Switch and Kill Switch
Direction indicator dimmer, and horn switch
Horn
Clutch Switch
Neutral Switch
Oil Pressure Switch
SWITCH CONNECTION
Main Switch
Kill Switch
Starter Switch
Lighting Switch
Direction Indicator
Horn Switch
Passing Switch
Dimmer Switch